


TruFlush Manual Dual Flush Flushometer

AVAILABLE IN INDIA ONLY

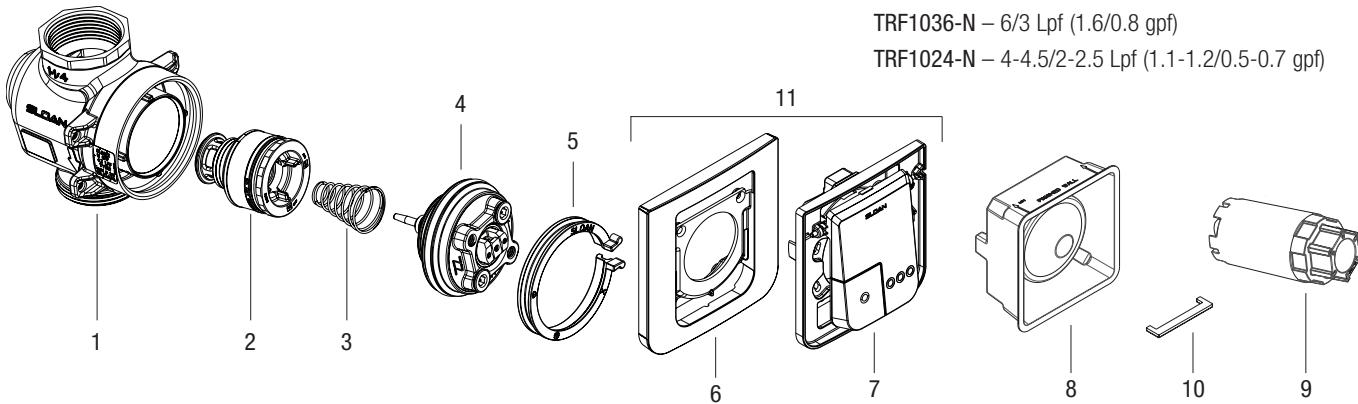

PARTS LIST

Item No.	Code No.	Part No.	Description
1	—	—	Valve Assembly
1A	0340085	GBL-66-A	Shut Off Sleeve (with O-Ring)
2	See table to the right	—	Piston Assembly with Spring
3	—	—	Conical Spring*
4	See table below	—	Activation Assembly
5	3340011	GBL-1011-A	Safety Collar
6	—	—	TRF Manual Dual Flush Finished Wall Plate, CP
7	—	—	TRF Manual Dual Flush Wall Bracket with Button Assembly
8	33400034	GBL-1061-A	Replacement Kit, Mud Guard Manual (4 Pack)
9	3340012	GBL-1012-A	Activation Assembly Tool
10	03400103	—	Depth Guide Tool, Dual Flush
11	—	TRF-1000	TRF Manual Dual Flush Wall Bracket and Button Assembly† (Includes items 6 & 7)

* Included with Piston Assembly.

† Consult factory for finish options.

ITEM NO. 2 - MANUAL DUAL FLUSH PISTON ASSEMBLY SELECTION GUIDE

Code No.	Part No.	Description	Aspirator Color*
33400097	GBL-1105-A	6/3 Lpf Closet Activation Assembly	Orange/Red
33400098	GBL-1106-A	4-4.5/2-2.5 Lpf Closet Activation Assembly	Grey

*Colors may differ. Consult factory to confirm you have the correct activation assembly.

IMPORTANT NOTE FOR 4-4.5/2-2.5 Lpf (1.1-1.2/0.5-0.7 gpf) FLUSHOMETERS & REPLACEMENT KITS

Sloan 4-4.5/2-2.5 Lpf (1.1-1.2/0.5-0.7 gpf) ultra-high efficiency flushometers meets all applicable standards and requirements. However, with low flush volumes it is imperative that they only be used in conjunction with toilet fixtures and drain line systems designed to operate with adequate flow rates and volumes in order to effectively eliminate waste and move it out of the building. It is the responsibility of the user to ensure both of these conditions are met. Not doing so may void your warranty.


Sloan 4-4.5/2-2.5 Lpf (1.1-1.2/0.5-0.7 gpf) piston kits are designed as a replacement part for Sloan 4-4.5/2-2.5 Lpf (1.1-1.2/0.5-0.7 gpf) flushometers only. They are not intended to be used as a means to reduce water consumption in flushometers with higher flush volumes such as 6/3 Lpf (1.6/0.8 gpf). Using this kit in any manner other than with a Sloan 4-4.5/2-2.5 Lpf (1.1-1.2/0.5-0.7 gpf) flushometer may void your warranty.

ITEM NO. 2 - MANUAL DUAL FLUSH PISTON ASSEMBLY SELECTION GUIDE

Code No.	Part No.	Description	Piston Color*
33400083	GBL-1103-A	6/3 Lpf Closet Piston Assembly	Orange/Red
33400064	GBL-1089-A	4-4.5/2-2.5 Lpf Closet Piston Assembly	Grey/Black

*Colors may differ. Consult factory to confirm you have the correct piston assembly.


	Piston Body		
Flush Volume	1.6/0.8 gpf 6/3 Lpf Water Closet	1.1-1.2/0.5-0.7 gpf 4-4.5/2-2.5 Lpf Water Closet	
Piston Body	Red with Screen	Grey with Screen	
Flow Control	Orange	Black Cage	
Part Number	GBL-1103-A	GBL-1089-A	
Code Number	33400083	33400064	

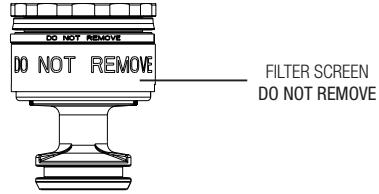

MANUAL DUAL FLUSH ASPIRATOR ASSEMBLY SELECTION GUIDE

Code No.	Part No.	Description	Aspirator Color*
33400085	GBL-1099-A	6/3 Lpf Closet Aspirator Assembly	Orange/Red
33400073IN	GBL-1095-A	4-4.5/2-2.5 Lpf Closet Aspirator Assembly	Grey

*Colors may differ. Consult factory to confirm you have the correct aspirator assembly.

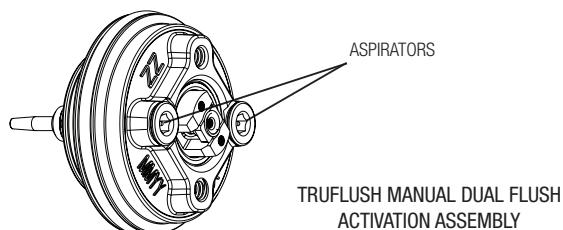

TruFlush Manual Dual Flush Flushometer

AVAILABLE IN INDIA ONLY

TROUBLESHOOTING GUIDE**1. Flushometer does not function (no water/flush).**

- A. Ensure water supply to valve is turned on.
- B. Shut off sleeve is in closed position. Turn counter-clockwise to open water flow. **Note:** there is approximately 1/8-turn (45°) of free spinning as the activation assembly engages the shut off sleeve between opening and closing the valve.
- C. Ensure activation assembly screws are aligned horizontally.
- D. Plunger screws are not adjusted properly. Adjust screws using depth guide tool.

2. Volume of water is not sufficient to evacuate the bowl.

- A. Full flush plunger screws (2 outer screws) are not adjusted to the same depth as half flush plunger screw (center screw). Adjust screws using depth guide.
- B. Insufficient flow pressure. Readjust activation assembly by turning counter-clockwise to increase flow pressure. Contact the fixture manufacturer for minimum water supply requirements of the fixture.
- C. Wrong model installed; replace with proper piston model. Consult fixture manufacturer for volume required.
- D. Check lip seal for wear. Replace piston if lip seal is worn or twisted.

3. Flushometer closes off immediately.

- A. Urinal piston parts installed in a Closet flushometer. Replace piston with proper Closet piston (6/3 Lpf or 4-4.5/2-2.5 Lpf).
- B. Piston lip seal may be damaged or worn. Replace with new correct gpf/Lpf piston.
- C. Plunger screw not set properly. Adjust screw using depth guide.

4. Too much water to fixture.

- A. Excessive flow pressure. Readjust activation assembly by turning clockwise to decrease flow pressure.
- B. Long flush. Worn piston; replace with new proper gpf/Lpf piston.
- C. Wrong model installed; replace with proper piston model. Consult fixture manufacturer for volume required.

5.. Valve does not shut off.

- A. Plunger screw is not adjusted properly (constant contact on plunger). Adjust screw using depth guide tool.
- B. Supply line water pressure has dropped and is not sufficient to close the Valve. Close Activation Assembly until pressure is restored.
- C. Piston filter screen is clogged, Piston is damaged, or large debris stuck behind Piston. Turn off water at Shut Off Sleeve, release pressure, remove safety collar and activation assembly. Remove Piston and check inside Valve for large debris. **Do not attempt to remove piston filter screen.** Replace piston if damaged or cleaning does not correct the problem.

6. Leaking at plunger.

- A. Seal worn. Replace activation assembly.

7. Chirping noise is heard at start or end of flush.

- A. Caused by air purging from the system inside the valve assembly. Noise will subside with several flushes or within a day.

8. Valve leaks through Aspirator when Activated.

- A. Debris between the umbrella valve and the retainer. Blow air on the aspirator. If this does not correct the problem, remove retainer with 5 mm Hex Key (not included) and wash it under clean running water. Replace aspirator if cleaning does not correct the problem.
- B. Loose Retainer. Hand tight retainer with 5 mm Hex Key (not included). **Do not overtighten.** Replace aspirator if this does not correct the problem.

CARE AND CLEANING

DO NOT use abrasive or chemical cleaners (including chlorine bleach) to clean Flushometers that may dull the luster and attack the chrome or special decorative finishes. Use ONLY mild soap and water, then wipe dry with clean cloth. While cleaning the bathroom tile, protect the Flushometer from any splattering off cleaner. Acids and cleaning fluids will discolor or remove plating.



When assistance is required, please contact
Sloan Technical Support at
(+91)124-6013300/33 (Toll Free 1800-123-3080)
customercare@sloan.in